

# SUMMARY TABLE OF CONTROLS N-COM B4 PLUS

		<i>Button</i>		<i>▲</i>		<i>▼</i>		<i>▲▼</i>		
		on	on	▲	▲	▼	▼	▲▼	▲▼	
		<i>Pressure</i>	Brief	Long	Brief	Long	Brief	Long	Brief	Long
<b>Basic Functions</b>	Turning on		X (2s)							
	Turning off		X (5s)							
	Increase Volume			X						
	Decrease Volume					X				
	Scroll menu (Base, Radio, Bike to Bike)		X (2s)							
<b>Bluetooth peripheral</b>	Answer phone call	X		X		X				
	Voice call		X (4s)							
	Hang up/reject a phone call		X (2s)							
	Redial last number							X		
	Mobile phone connection		X (4s)							
	Mobile phone disconnection									X (4s)
	Call transfer									X (4s)
	Activate Conference Mode	X								
<b>Base Menu</b>	Activate audio via cable				X (2s)					
	Deactivate audio via cable						X (2s)			
	Disconnect A2PD device						X (2s)			
	Play music (Play)				X (2s)					
	Pause Function (Pause)				X (2s)					
	Next track (Forward)				X (4s)					
	Activate intercom or Universal Intercom	X								
	Deactivate intercom or Universal Intercom	X								
<b>Radio menu</b>	Automatic search for new station				X (2s)					
	Change station (pre-set stations)						X (2s)			
	Pre-set station				X (4s)					
<b>Bike to Bike Menu</b>	Answer call Bike-to-Bike	X		X		X				
	Intercom swap (from Bike-to-Bike to Rider-Pillion Passenger)*	X		X						
	Connection to Bike 1				X (2s)					
	Connection to Bike 2						X (2s)			
	Connection to Bike 3				X (4s)					
	Connection to Bike 4						X (4s)			
<b>Setting</b>	Pairing up mode - system turned off		X (4s)							
	'Rider-Passenger' or 'Universal Intercom' intercom pair up	X								
	Bike 1 pair up				X (2s)					
	Bike 2 pair up						X (2s)			
	Bike 3 pair up				X (4s)					
	Bike 4 pair up						X (4s)			
	Bike-to-Bike menu enabling/disabling									X
	Erase pair ups**									X (4s)

\*Briefly press at the same time.

\*\*With N-Com system in Pairing up Mode.