

SUMMARY TABLE OF CONTROLS N-COM BX4 PLUS

		<i>Button</i>		on	on	▲	▲	▼	▼	⬆	⬆
		<i>Pressure</i>		Brief	Long	Brief	Long	Brief	Long	Brief	Long
Basic Functions	Turning on		X (2s)								
	Turning off		X (5s)								
	Increase Volume			X							
	Decrease Volume						X				
	Scroll menu (Base, Radio, Bike to Bike)		X (2s)								
Bluetooth peripheral	Answer phone call	X		X			X				
	Voice call		X (4s)								
	Hang up/reject a phone call		X (2s)								
	Redial last number									X	
	Mobile phone connection		X (4s)								
	Mobile phone disconnection										X (4s)
	Call transfer										X (4s)
	Activate Conference Mode	X									
Base Menu	Activate audio via cable				X (2s)						
	Deactivate audio via cable							X (2s)			
	Disconnect A2PD device							X (2s)			
	Play music (Play)				X (2s)						
	Pause Function (Pause)				X (2s)						
	Next track (Forward)				X (4s)						
	Activate intercom or Universal Intercom	X									
	Deactivate intercom or Universal Intercom	X									
Radio menu	Automatic search for new station				X (2s)						
	Change station (pre-set stations)							X (2s)			
	Pre-set station				X (4s)						
Bike to Bike Menu	Answer call Bike-to-Bike	X		X			X				
	Intercom swap (from Bike-to-Bike to Rider-Pillion Passenger)*	X		X							
	Connection to Bike 1				X (2s)						
	Connection to Bike 2							X (2s)			
	Connection to Bike 3				X (4s)						
	Connection to Bike 4							X (4s)			
Setting	Pairing up mode - system turned off		X (4s)								
	'Rider-Passenger' or 'Universal Intercom' intercom pair up	X									
	Bike 1 pair up				X (2s)						
	Bike 2 pair up							X (2s)			
	Bike 3 pair up				X (4s)						
	Bike 4 pair up							X (4s)			
	Bike-to-Bike menu enabling/disabling										X
	Erase pair ups**										X (4s)

*Briefly press at the same time.

**With N-Com system in Pairing up Mode.